

Clubshow controller - Setting dip switches on the lights

You need to set the dip switches on the lights to determine which head number and which Zone they are going to use. If you are using VR8 lights, you need to set the channel numbers given in the last table.

Select the Zone: You can set your lighting units to operate on one of the four "zone" buttons by setting dip switches 5 and 6 on the lighting units.

	Zone 1	Zone 2	Zone 3	Zone 4
Switch 5	OFF	ON	OFF	ON
Switch 6	OFF	OFF	ON	ON

Select the Head number: Dip switches 3 and 4 set the head number within the zone. You can control 4 heads separately in each zone.

	Head 1	Head 2	Head 3	Head 4
Switch 3	OFF	ON	OFF	ON
Switch 4	OFF	OFF	ON	ON

Select the Head type: Dip switches 1 and 2 should be set according to the type of the lighting unit. All units except Twister4 and ClubColour use the Normal setting.

	Normal	Twister4	ClubColour
Switch 1	ON	OFF	ON
Switch 2	OFF	ON	ON

Channel settings for VR8's

	Zone 1	Zone 2	Zone 3	Zone 4
Head 1	001	017	033	049
Head 2	005	021	037	053
Head 3	009	025	041	057
Head 4	013	029	045	061